


Refilling the tank

- ► Start inlet of cold water. ①
- ➤ Wait until the water level has reached the static level ②, stop cold water supply. ③
- ➤ Disconnect the suction hose of the disposal vehicle from the Storz-B coupling.
- ► Record the disposal in the log book.
- √ Disposal procedure is completed.

The preset pump run time depends on the nominal size of the separator and corresponds to the required duration for the flushing process.

① The values can be adjusted to the respective requirements using the Kessel NFC app.

Download it from the app stores.

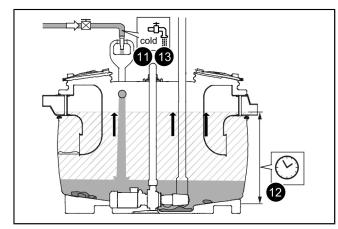

Apple Store Google Play Store https://apps.apple.com/de/app/kessel-nfc/id6449256249 https://play.google.com/store/apps/details?id=com.kessel.nf-capp&gl=DE