


Erstinbetriebnahme **SonicControl** für Leichtflüssigkeitsabscheider Activation of **SonicControl** for Coalescence Separators

1. Korrekte Sensormontage überprüfen, siehe Einbau- und Bedienungsanleitung Kapitel „3.2 Montage Sensor und Sensor-Halter“.
Montieren Sie die Halterung im Einlaufbauwerk mit der beiliegenden Bohrschablone und Montagehalterung, hierbei muss der Sensorhalter mit dem grünen Pfeil zum Ruhewasserspiegel (Unterkante Auslaufbauwerk) justiert werden.
1. Check for correct sensor installation (see SonicControl installation and user's manual - Section 3.2 - 'Installation of Sensor and Sensor Bracket')
Install the SonicControl bracket on the interior located inlet device of the separator by using the included drilling template and screws. The tip of the green arrow on the SonicControl must be at the clear water level (same as separator outlet level).

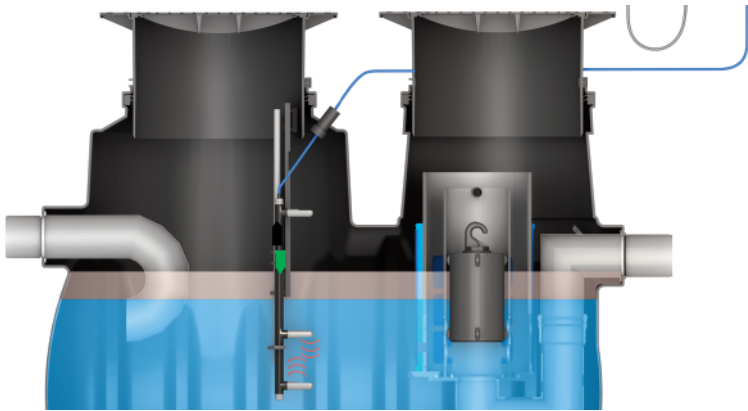

2. Erstinitialisierung durchführen! Die Informationen hierzu finden Sie auf dem Typenschild des Leichtflüssigkeitsabscheiders (im Bereich des Aufsatzstückes).
2. Carry out the first initialization of the SonicControl. Information required for this is on the identification plate of the coalescence separator (in the area of the upper section).
3. Führen Sie eine Handmessung durch Kapitel „8.4.1 Handbetrieb“
3. Carry out a manual measurement (see user's manual 8.4.1)
4. Die erste Schichtdicke erscheint auf dem Display nach 24h, bis dahin wird „- -“ angezeigt.
4. The first layer thickness appears on the display after 24 hours, until then "- -" is displayed.
5. Falls die Meldung: „Keine Ruhephase erkannt“ auf dem Display erscheint, bedeutet das, dass der Sensor (noch) keinen gültigen Messwert ermitteln konnte.
5. In the case that 'no resting phase' is displayed on the digital display, this means that the SonicControl measurement took place while the separator was in operation, this message will disappear after a few days.